

CASE IH
AGRICULTURE
FOR THOSE WHO DEMAND MORE

MAXXUM

TRACTORS 110 - 140 HP



MODEL	MAXXUM 110	MAXXUM 125	MAXXUM 140
ENGINE			
Rated power (hp) (ECE R120)	112	126	141
Rated Full Load (rpm)	2200	2200	2200
Cylinder/displacement (L)	4 / 4.5	6 / 6.75	6 / 6.75
Number of valves	8	12	24
Aspiration	Turbocharged / Aftercooled	Turbocharged / Aftercooled	Turbocharged / Aftercooled
Fuel Injection	Mechanical	Mechanical	Mechanical
Fuel tank capacity (L)	176	250	250
ELECTRICAL			
Alternator (Amp)	120	120	120
Battery capacity	960 CCA	960 CCA	960 CCA
TRANSMISSION			
Standard	12F / 12R Synchro	12F / 12R Synchro	24F / 24R with Hi/Lo Powershift
Optional	24F / 24R with Hi/Lo Powershift	24F / 24R with Hi/Lo Powershift	16F / 16R Semi Powershift
	16F / 16R Semi Powershift	16F / 16R Semi Powershift	17F / 16R Semi Powershift
Creeper Transmission Options	24x24 / 48x48 / 32x32	24x24 / 48x48 / 32x32	32x32
PTO	540 / 1000	540 / 1000	540 / 1000
HYDRAULICS			
Hydraulic Type	Fixed Displacement / CCLS	Fixed Displacement / CCLS	Fixed Displacement / CCLS
Rear Remotes – Std. / Opt.	2 / 3 / 4 Open Center	2 / 3 / 4 Open Center	2 / 3 / 4 Open Center
Standard Steering and Service Pump (lpm)	40	40	40
Implement Pump (lpm)	63/80/113	63 / 80 / 113	63 / 80 / 113
Total Tractor Flow (lpm)	103/120/153	103 / 120 / 153	103 / 120 / 153
3-Point Hitch Category	Cat II Fixed / Cat II/III Quick Attach	Cat II Fixed / Cat II/III Quick Attach	Cat II Fixed / Cat II/III Quick Attach
Sensing Type	Mechanical Draft Control (MDC) / Electronic Draft Control	Mechanical Draft Control (MDC) / Electronic Draft Control	Electronic Draft Control (EDC)
Standard Hitch Lift Capacity (kg)	3345 (OECD Test)	3345 (OECD Test)	4181
Optional Lift Capacity (kg)	3763	3763	5286
SHIPPING WEIGHT/DIMENSIONS			
Estimated Weight – ROPS 2WD (kg)	4174	4294	—
– ROPS MFD (kg)	4340	4460	—
– Cab 2WD (kg)	4573	4694	—
– Cab MFD (kg)	4740	4860	4950
Height to Top of ROPS (Up Position)** (mm)	2898**	2898**	—
Height to Top of Cab** (mm)	2819**	2819**	2898**
Wheelbase – 2WD (mm)	2370	2652	—
– 4WD (mm)	2412	2661	2661

WWW.CASEIH.COM

CNH Industrial Asia, Middle East & Africa, Riva Paradiso, 14 - 6902 Paradiso-Lugano Switzerland

! SAFETY NEVER HURTS![™] Always read the Operator's Manual before operating any equipment. Inspect equipment before using it, and be sure it is operating properly. Follow the product safety signs, and use any safety features provided. This literature has been published for worldwide circulation. The standard and optional equipment and the availability of individual models may vary from one country to the next. Case IH reserves the right to undertake modifications without prior notice to the design and technical equipment at all times without this resulting in any obligation whatsoever to make such modifications to units already sold. Whilst every effort is made to ensure that the specifications, descriptions and illustrations in this brochure are correct at the time of going to press, these are also subject to change without prior notice. Illustrations may show optional equipment or may not show all standard equipment. Case IH recommends **AKCELA** lubricants.

CASE IH
AGRICULTURE
 FOR THOSE WHO DEMAND MORE